

BuzziNest



Pod Owner Manual US



Congratulations!

Congratulations on purchasing your BuzziNest Pod. In this manual, you will find some guidelines on how to take care and get the best use out of the product, so you can enjoy BuzziNest to its full capacity.

Please read this booklet carefully before using or attempting to fix the product, and be sure to keep it for future reference.

Remember to always check **www.buzzi.space/buzzinest** for the latest information.

General.



Materials

Structure: Poplar plywood
Frame: laminated plywood with oiled trim
Glass: safety glass with acoustic film
Inside finish: Felt, Felt Printed or 3D pattern in Fabric or Trevira CS+
Outside finish: fabric-covered thermofixed felt in Fabric or Trevira CS+



Power

Mains supply: 120V AC 50-60Hz, max 15A
Stand-by consumption: 1,2W
Consumption when in use: 13,7W



Output

Table socket: 120V AC 50-60Hz, max 14A
Twin USB charger: type A, max 4A at 5VDC combined



Lighting unit

Power usage: 14W
Input: 120V AC 50-60Hz
Lumen output: 1260 lumen
Color Temperature: 4000K
Color Rendering Index: >80



Ventilation unit

Min. power usage: 3,46W
Max. power usage: 8,64W
Input: 12V dc
Airflow rates:
1 - 21 l/s - 13,7W
2 - 32 l/s - 15,3W
3 - 40 l/s - 17,5W
4 - 51 l/s - 21,3W
Airflow rate when occupied: 32 l/sec - 15,3W
Airflow rate after 5 min without occupancy: 16 l/sec
Airflow rate stand-by mode, after 15 min without occupancy: 4 l/sec - 1,3W



Dimensions and weight

Width 240 cm | 94.5"
Depth 125 cm | 49.2"
Height 218 cm | 85.8"
590 kg | 1300 lbs (excluding shelf, table, seating elements, electrification)

Safety Instructions.

Important safety and product instructions

Preface

This instruction manual shows the necessary information for the installation of the product. Make sure that everyone involved in the installation has read and understands the contents of the installation and the safety instructions.

Review the assembly instructions to confirm that the appropriate critical components and accessories are being used with the furnishing.
These prefabricated modules and assemblies are intended for installation rearrangement and inspection in accessible locations in accordance with Article 604 of the NEC. AHJs should be consulted prior to installation.


 **SAVE THESE INSTRUCTIONS**

Product Information



The information in this manual is valid at the time of publication and corresponds to the product at the time of delivery.

Intended use

BuzziNest pod is intended for short term indoor commercial and household use by four (4) persons at a time.

 **WARNING:** To reduce the risk of burns, fire, electric shock or injury to persons: Use this product only for its intended use as described in the user instructions. Do not use attachments not recommended by the manufacturer.



Fire Safety






	WARNING! To reduce the risk of burns, fire, electric shock or injury to persons, obey the following:
	In case of a fire inside the booth, disconnect the power cord when it's safe to do so. The power cable serves as a power cut device for pluggable equipment. The power outlet must be near the equipment and easily accessible.

Fire and safety devices like sprinklers or alarms can be installed in the booth (separate instructions on demand).
The need for fire and safety devices in the booth shall always be determined by the applicable local authorities.




Electrical Safety







Input for the electrical system: 120V AC 15A 50-60Hz
The maximum load for the electrical system is 15 A.

	DANGER! To reduce the risk electric shock, obey the following:
	<p>In non-hardwired products: Always unplug this furnishing from the electrical outlet before cleaning or servicing. Unplug from outlet before putting on or taking off parts Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged. Connect this furnishing to a properly grounded outlet only In case of a fire inside the booth, disconnect the power cord when it's safe to do so.</p> <p>In hardwired products: Always disconnect this furnishing from the electricity network before disassembly, cleaning or servicing.</p>

	WARNING! To reduce the risk of burns, fire, electric shock or injury to persons, obey the following:
	Connect the power cord to a properly grounded outlet only.
	Keep the power cord of the product away from the heated surfaces.
	Do not use the BuzziNest Booth if you notice any defects or damage to the electrical equipment.
	Do not connect any extension cords to the power outlet(s) of the product.

Installation, maintenance and disassembly









	WARNING! To reduce the risk of burns, fire, electric shock or injury to persons, obey the following:
	Use cut resistant safety gloves during the installation, maintenance os disassembly of the product.
	Use Steel toed safety boots during the installation, maintenance or disassembly of the product.







	Wear safety goggles when installing, maintaining or disassembling the product.
	Read and follow closely the instructions. Plan your work and work your plan.
	Local rules and regulations with regards to workplace safety must be respected.
	Keep the work area clear of debris during installation, maintenance or disassembly.
	No load allowed on top of the product, do not climb onto the product.
	Do not move or push the product without disconnecting the power cord and activating the wheels.

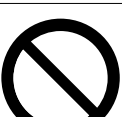Use

The maximum load for the BuzziNest Pod Table is 110 lbs (50 kg)


The maximum load for the BuzziNest Cube is 300 lbs (136 kg)

	WARNING! To reduce the risk of burns, fire, electric shock or injury to persons, obey the following:
	Read and follow closely the instructions before using the product.
	Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
	Keep children away from extended foot support (or other similar parts).
	The air inside the product is extracted from the surrounding area, if this surrounding area is in anyway hazardous, do not use the product.
	Do not use the product in case of a non-working ventilation.
	Do not use the product in case of blocked ventilation channels, make sure the ventilations channels are kept open and free from any dust fluff, hair and such.
	Never operate this furnishing if it has any defects in the electrical equipment, if it is not working properly, if it has been dropped or damaged. disconnect this furnishing from the electricity network and contact your dealer.

	Do not insert any objects or drop anything into any of the unit's openings unless it's instructed in the manual.
	Do not use outdoors
	Do not use where aerosol (spray) products are being used or where oxygen is being administered.
	No load allowed on top of the product, do not climb onto the product.
	Do not lean against the product
	No smoking allowed inside the product.


Markings.

BuzziNest Pod

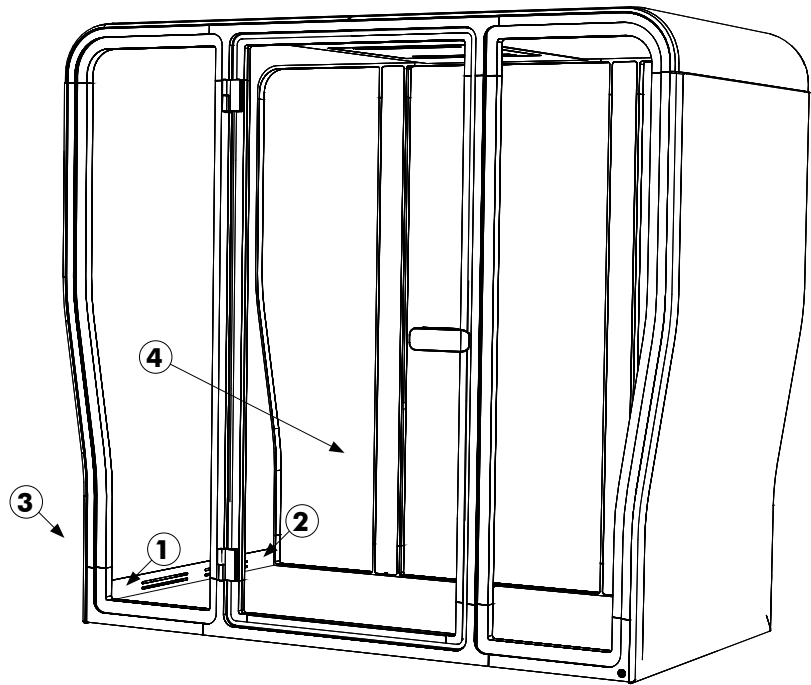


Label	Label Text
1. <div></div>	Product/ Produit: BuzziNest Pod Input/Entrée: 120V AC 15A 50-60Hz Manufacturer/Fabricant: BuzziSpace Web: www.buzzi.space Email: info@buzzi.space Made in Lithuania / Fabriqué en Lituanie Evaluated to ASTM E84, smoke developed index over 450. / Évalué selon ASTM E84, indice de fumée développé supérieur à 450.
2. <div></div>	SN/N° de série: . MANUFACTURE DATE / DATE DE FABRICATION: MM/YYYY
3. <div></div>	WARNING Risk of fire and shock! Use Only SJT type 14 AWG cord. See installation manual for instruction on how to hard wire to mains supply. Kit Code: 881 AVERTISSEMENT Risque d'incendie et d'électrocution ! Utilisez uniquement un cordon de type SJT 14 AWG. Consultez le manuel d'installation pour savoir comment se connecter au réseau électrique. Code du kit : 881
4. <div></div>	This furnishing has not been evaluated for flammability or cigarette ignition resistance. L'inflammabilité ou la résistance à l'allumage d'une cigarette n'a pas été évaluée pour cette garniture.

BuzziNest Pod with optional Table

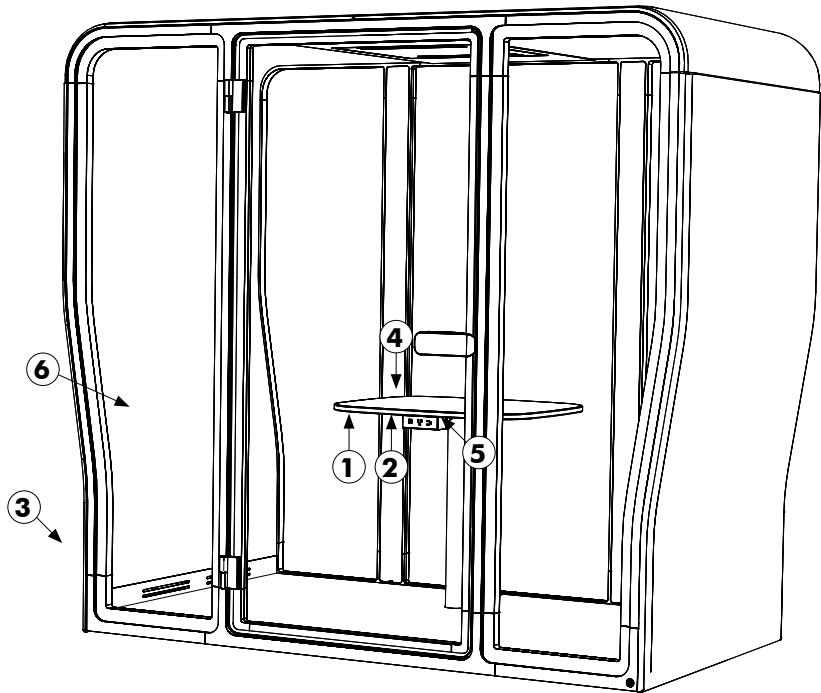


Label	Label Text
1. <div></div>	Product/ Produit: BuzziNest Booth Input/Entrée: 120V AC 15A 50-60Hz Manufacturer/Fabricant: BuzziSpace Web: www.buzzi.space Email: info@buzzi.space Made in Lithuania / Fabriqué en Lituanie Evaluated to ASTM E84, smoke developed index over 450. / Évalué selon ASTM E84, indice de fumée développé supérieur à 450.
2. <div></div>	SN/N° de série: . MANUFACTURE DATE / DATE DE FABRICATION: MM/YYYY
3. <div></div>	WARNING Risk of fire and shock! Use Only SJT type 14 AWG cord. See installation manual for instruction on how to hard wire to mains supply. Kit Code: 881 AVERTISSEMENT Risque d'incendie et d'électrocution ! Utilisez uniquement un cordon de type SJT 14 AWG. Consultez le manuel d'installation pour savoir comment se connecter au réseau électrique. Code du kit : 881
4. <div></div>	WARNING Risk of injury The maximum load for the BuzziNest Booth Shelf is 66 lbs (30kg) L'AVERTISSEMENT Risque de blessure Poids maximal pour BuzziNest Booth Shelf est de 66 lbs (30 kg)
5. <div></div>	Max. 14A
6. <div></div>	This furnishing has not been evaluated for flammability or cigarette ignition resistance. L'inflammabilité ou la résistance à l'allumage d'une cigarette n'a pas été évaluée pour cette garniture.

Functionalities.



Lighting unit

The lighting unit is triggered by a motion detector and illuminates the moment someone enters BuzziNest Pod. When the motion detector no longer detects a presence, it switches off the light after five minutes to save energy.




Ventilation Unit

The ventilation unit assures good air quality within the Pod. The ventilation is triggered by a motion detector. The moment someone enters the Pod, fresh air is blown in from above, pushing the air outside through the vent holes at the bottom of the Pod. When the motion detector no longer detects a presence, the ventilation remains on for another five minutes. The fan speed will then decrease to 50% for the next 10 minutes to flush out the interior air whilst the Pod is unoccupied. Following flush mode, the fan will once again reduce its speed to about 10% of its full capacity until the motion sensor is triggered by another user.

Move BuzziNest Pod.


STEP 1

Disconnect from the mains power.

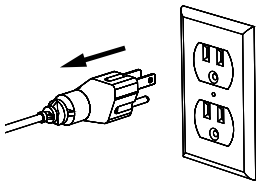


STEP 2

Remove the carpet.

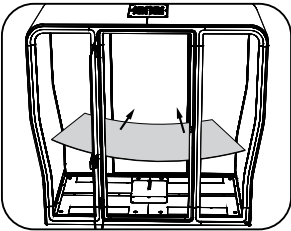


STEP 3

Unscrew the feet (in the corners and the middle - 8 in total), so they no longer touch the ground. BuzziNest now rests on its wheels.

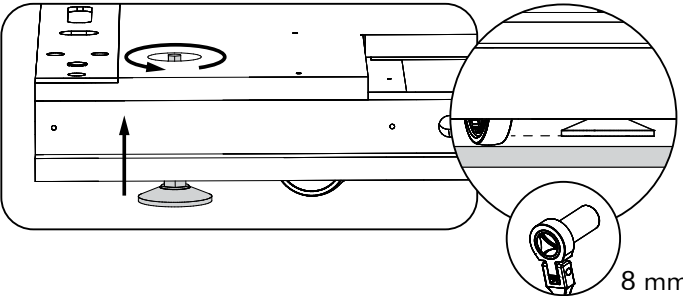


STEP 4

Move BuzziNest.

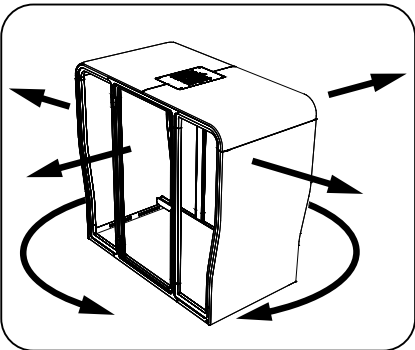


STEP 5

Twist the feet out to secure in its new position.

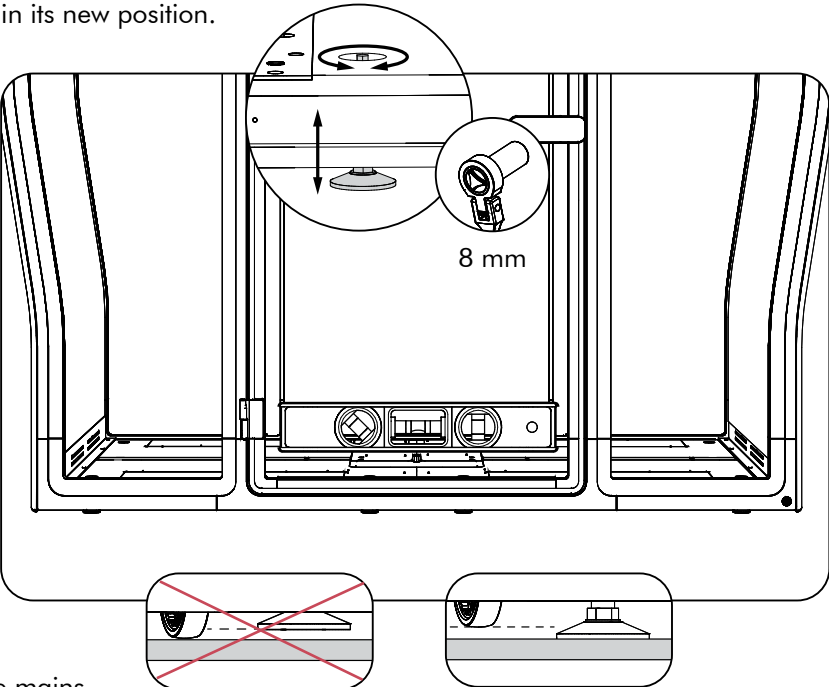


STEP 6

Put the carpet back in place.

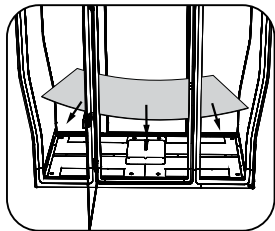


STEP 7

Connect to the mains.

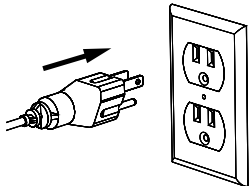


Changing the fuse


STEP 1
Disconnect from the mains power.

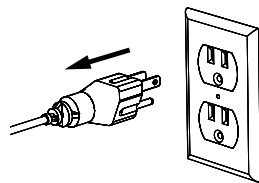


STEP 2
Remove the carpet.

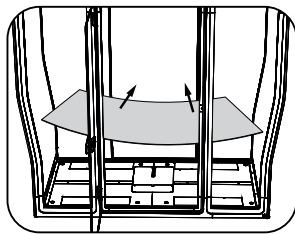


STEP 3
Unscrew metal vents

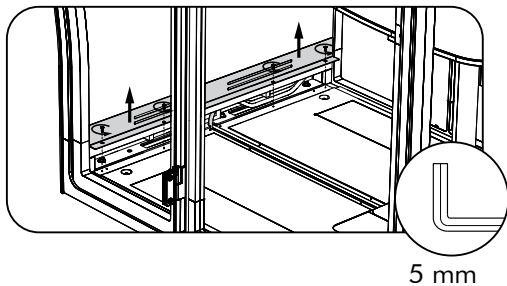


STEP 4
Lift internal liners.

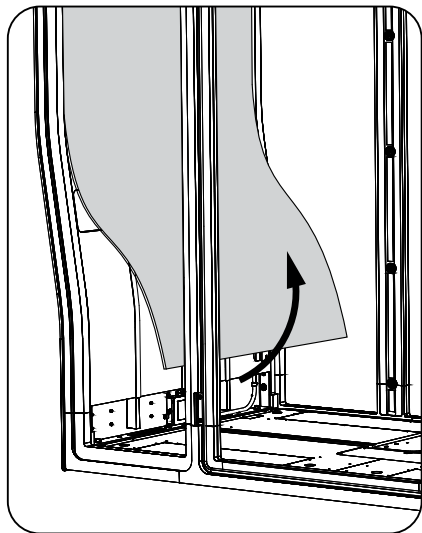


STEP 5
Unscrew fuse cap on the left and replace the fuse.
Only replace with 15A ceramic 6.3 x 32 mm, Speed T.

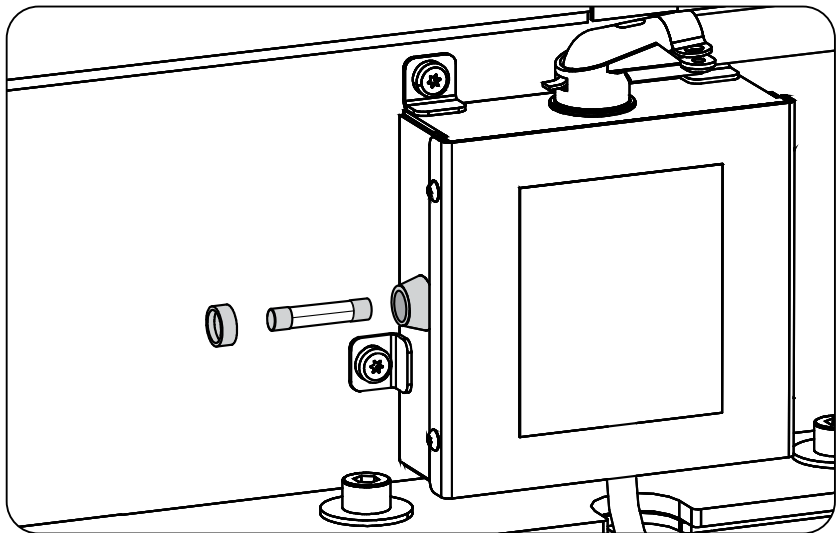


STEP 6
Place the internal liners back.

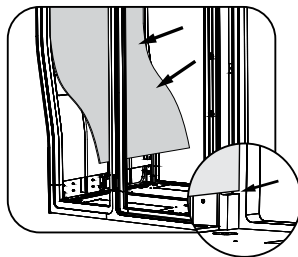


STEP 7
Place the metal vents back in.

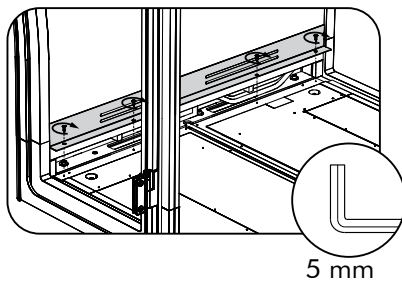

STEP 8
Put the carpet back in place.

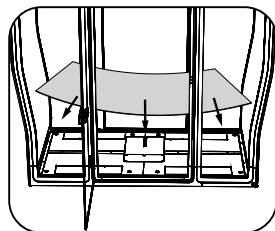

STEP 9
Connect to the mains.

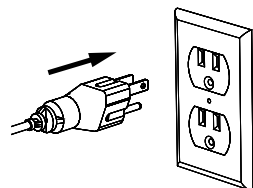

Regular care & maintenance.

Wood & Laminate (frame, shelf, table, door handle)



Clean all surfaces with a soft, damp cloth. Wipe in the direction of the grain.



Immediately remove all liquids on wood surfaces by blotting them dry. Use coasters for drinks.




Expose to humidity levels between 50% and 60% to avoid wood shrinks, small cracks, and splits.



Do not use abrasive sponges or cloths, furniture polishes, harsh solvents, glass cleaners, or waxes. Do not wipe against the grain or expose the wood to extreme temperatures or humidity.

Fabric, Felt & Carpet



Vacuum regularly to remove dust and dirt in addition to maintaining fire-retardant properties.



Alcohol-based disinfectants can be used without damaging the textiles or changing their color.
Concentration: between 70 - 85%.
Apply with a sprayer.



Do not steam the 3D fabric pattern; use a non-abrasive sponge or cloth.

Glass




Use a standard glass cleaning solution.


Stain removal.

Fabric, Felt & Carpet

- 

Light stains
Carefully dab with pH-neutral soap and a clean damp cloth or sponge. Edge marks can be avoided by dabbing gently in circular motions towards the center of the stain with a clean, lint-free cloth.
- 

Large stains
Dry clean professionally.
- 

Dried-in stains
Gently remove with a soft edge. Vacuum and then clean with a soft dampened cloth. Dry before use.
- 

Grease
Use an appropriate detergent or solvent. Test first on an inconspicuous area to avoid damage.

Wood & Laminate

- 

Spilled drinks
Soak up, rub with a damp cloth, and wipe dry.
- 

Glue and nail varnish
Contact a professional cleaner.
- 

Ink and permanent marker
Remove immediately with methylated spirits or lemon juice.
- 


Dried up liquids
Remove with a damp sponge and dry with a blow dryer.
- 

Grease
Wipe with a wet sponge and dishwashing detergent, rinse, and dry.


Cleaning the ventilation.

At least once a year, the ventilation fans and grids should be cleaned to ensure a healthy environment inside BuzziNest.


- STEP 1**
Disconnect from the mains power.




- STEP 2**
Use a vacuum cleaner with a brushed head to remove dust from:

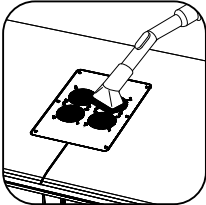

a. the ventilator on top of the Pod

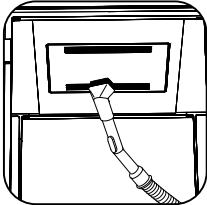


b. the ventilation holes at the lighting unit

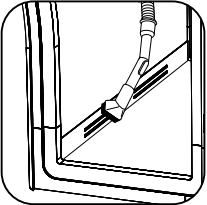

c. the ventilation holes at the frame nearby the carpet

- STEP 3**
Connect BuzziNest to the mains power.

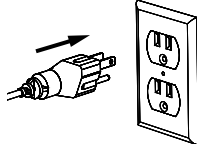

Note: Once every 5 years the ventilation ducts located behind the lighting plate and beside the carpet should be cleaned.

Contact a professional installer for partial disassembly and cleaning of BuzziNest Booth.

FAQ.

Please check our website for the latest version.
www.buzzi.space/buzzinest

Troubleshooting.

No light, no ventilation, no power from the socket

- Check the power cord inlet.
- Check if the socket outlet to which the BuzziNest is connected is powered.

The following troubleshooting steps should be done by a professional installer:

- Check the connection of the internal power cords.

If one of the above functions is working and the others are not, there might be a defect.

- Please contact your dealer/agent for technical assistance.

The BuzziNest is unstable

- Level the BuzziNest by screwing the feet located underneath the booth either up or down.
The leveling feet are accessible underneath the carpet.

The door does not close properly

- The hinges are equipped with a leveling mechanism. They can be adjusted using an Allen key.

Fire safety

Although no regulations are known where placing sprinkler heads are mandatory, you can reach out to your dealer or BuzziSpace for more information.

Contact information.

This BuzziNest Pod was sold and installed by:

Name

Contact person

Address

Phone

Email

Remarks

BuzziSpace Group NV

Italiëlei 8, 2000 Antwerp, Belgium
+32 (0)3 846 10 00 | info@buzzi.space

www.buzzi.space

Doc nr.: A-0000007393/05
Last update: 11/12/2023

