

Efficacy of The Novaerus NV 1050 device against Aerosolized Bacillus Globigii Endospores

Jamie Balarashti^a, Jeffery Trolinger^a

^a Aerosol Research and Engineering Laboratories Inc. Olathe KS

Background: This in vitro study characterized the efficacy of the Novaerus NV 1050 device at removing aerosolized Bacillus Globigii Endospores. The Novaerus NV 1050 device is designed to reduce airborne bacteria, viruses, and fungal spores in order to decrease infections rates from airborne pathogens. For this study the Novaerus NV 1050 device was challenged using aerosolized Bacillus Globigii Endospores which has been historically used as a surrogate for Anthrax a biological warfare agent. This study evaluated the efficacy of the device against aerosolized Bacillus Globigii as well as various sizes of polystyrene latex microspheres (PSL) in a stainless steel bioaerosol chamber. The study consisted of a total of four (4) live bioaerosol trials, single (1) bioaerosol control run plus three PSL (3) challenge trials as well as PSL control trials. All trials evaluated the NV 1050 device on the highest fan velocity setting with the exception of a 24 hour run reported in Appendix B.

Methods: Bacillus Globigii was aerosolized into a sealed environmental bioaerosol chamber containing the Novaerus NV 1050 device. AGI Impinger samples were taken at 0, 7.5, 15, 22.5, 30 and 45 minutes from the chamber in order to quantify the reduction speed and capabilities of the Novaerus NV 1050. AGI impingers were used to sample chamber bioaerosol concentrations, all impinger samples were serially diluted, plated and enumerated in triplicate to yield viable bioaerosol concentration at each sampling point and time. Chamber control trial data was subtracted from the NV1050 trial data to yield net LOG reduction in the chamber for the bioaerosol challenges.

Results: When tested against the Bacillus Globigii the device showed a high net log reduction in a relatively short amount of time at the 22.5-minute time point there was an average 4.84 LOG reduction. At the 30-minute time point the Novaerus NV 1050 device had an average net log reduction of 5.11. At the 45 minute time point the device showed an average net LOG reduction of 5.56 which equates to a greater than 99.999% reduction.

This study was conducted in compliance with FDA Good Laboratory Practices (GLP) as defined in 21 CFR, Part 58.

Introduction

This study was conducted to evaluate the efficacy of the Novaerus NV 1050 air purification device at reducing aerosolized Bacillus Globigii Endospores. The Novaerus NV 1050 device is an air purification system intended for use in medium to large sized rooms. The unit has several different settings ranging from low to high. All testing conducted during this study utilized at the highest device setting with the exception of a 24 hour run reported in appendix b.

The Novaerus NV 1050 contains HEPA grade filtration in addition to plasma technology to further reduce viable airborne organisms. The test plan incorporated challenging the Novaerus NV 1050 device in a closed environmental chamber to determine the destruction rate of Bacillus Globigii endospores by the Novaerus NV 1050 device. A picture of the Novaerus NV 1050 device is shown in **Figure 1**, on the following page.

Study Overview

The effectiveness of the Novaerus NV 1050 device was evaluated against a single bacterial endospore which was Bacillus Globigii. For more organism information please see species selection section in the body of this report. Particulate testing was also performed with polydispersed latex microspheres ranging from 0.5 to 5um.

Testing was conducted to characterize a single Novaerus NV 1050 unit against a single bacterial endospore with quadruplicate (4) independent trials as well as a single (1) control trial to demonstrate the capability of the Novaerus NV 1050 device to reduce viable bioaerosol concentrations therefore theoretically reducing chances of airborne infection. This study does not make any claims regarding the efficacy of this device at reducing airborne infections.



Figure 1: Novaerus NV 1050 device

Bioaerosol Testing Chamber

A large sealed aerosol test chamber was used to replicate a potentially contaminated room environment and to contain any potential release of aerosols into the surrounding environment.

The aerosol test chamber is constructed of 304 stainless steel and is equipped with three viewing windows and an air-tight lockable chamber door for system setup and general ingress and egress. The test chamber internal dimensions are 9.1ft x 9.1ft x 7ft, with a displacement volume of 579 cubic feet, or 16,000 liters. **Figure 2** shows the bioaerosol chamber used for all testing in this study.

The chamber is equipped with filtered HEPA inlets, digital internal temperature and humidity monitor, external humidifiers (for humidity control), lighting system, multiple sampling ports, aerosol mixing fans, and a HEPA filtered exhaust system that are operated with wireless remote control. For testing, the chamber was equipped with four 3/8-inch diameter stainless steel probes for aerosol sampling, a 1-inch diameter port for bio-aerosol dissemination into the chamber using a Collison 24-jet nebulizer for the aerosolization of the bacteriophage.

A ¼ inch diameter probe was used for continuous aerosol particle size monitoring via a TSI Aerodynamic Particle Sizer (APS) model 3321. All sample and dissemination ports were inserted approximately 18 inches from the interior walls of the chamber to avoid

wall effects and at a height of approximately 40 inches from the floor.

The aerosol sampling and aerosol dissemination probes are stainless steel and bulk headed through the chamber walls to provide external remote access to the aerosol generator and samplers during testing.



Figure 2: Bioaerosol Test Chamber Exterior.

The test chamber is equipped with two high-flow HEPA filters for the introduction of filtered purified air into the test chamber during aerosol evacuation/purging of the system between test trials and a HEPA filtered exhaust blower with a 500 ft³/min rated flow capability for rapid evacuation of remaining bioaerosols.

A Magnehelic gauge with a range of 0.0 +/- 0.5 inch H₂O (Dwyer instruments, Michigan City IN) was used to monitor and balance the system pressure during aerosol generation, aerosol purge and testing cycles.

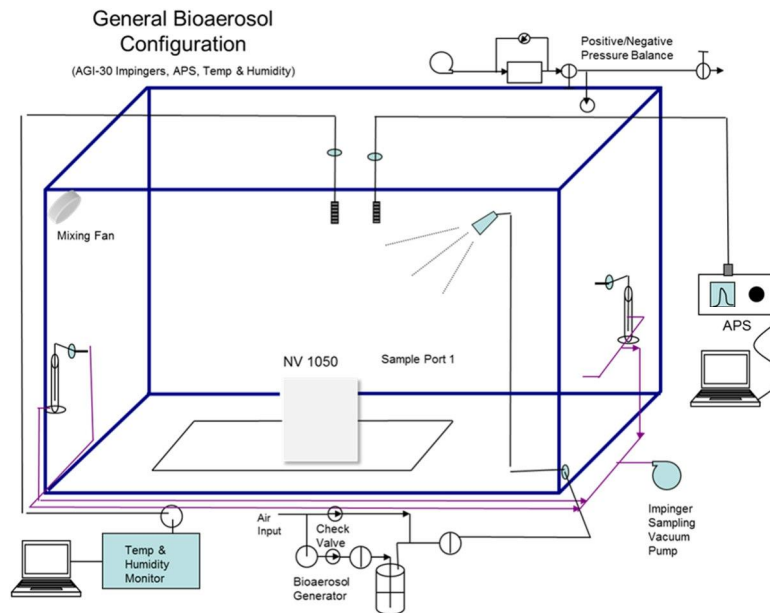


Figure 3: Bio-Aerosol Test Chamber Flow Diagram.

Bioaerosol Generation System

Test bioaerosols were disseminated using a Collision 24-jet nebulizer (BGI Inc. Waltham MA) driven by purified filtered house air supply. A pressure regulator allowed for control of disseminated particle size, use rate and sheer force generated within the Collision nebulizer.

Prior to testing, the Collision nebulizer flow rate and use rate were characterized using an air supply pressure of approximately 60 psi, which obtained an output volumetric flow rate of 50-80 lpm with a fluid dissemination rate of approximately 1.25 ml/min. The Collision nebulizer was flow characterized using a calibrated TSI model 4040 mass flow meter (TSI Inc., St Paul MN).

Bioaerosol Sampling and Monitoring System

Two AGI impingers (Ace Glass Inc. Vineland NJ) were used for bio-aerosol collection of all biological aerosols to determine chamber concentration. The AGI-30 impinger vacuum source was maintained at a negative pressure of 18 inches of Hg during all characterization and test sampling to assure critical flow conditions. The AGI-30 sample impingers were flow characterized using a calibrated TSI model 4040 mass flow meter.

Aerosol particle size distributions and count concentrations were measured in real-time through the duration of all control and Novaerus NV 1050 trial runs using a model 3321 Aerodynamic Particle Sizer (APS) (TSI Inc., St Paul, MN). The APS sampled for the entire duration of all trials (60 minutes) with 2-20 minute sampling intervals. A general flow diagram of the aerosol test system is shown above in **Figure 3** above.

Species Selection

Species selection is based on Biological Safety Level 1 (BSL1) surrogates for BSL3 pathogenic organisms. *Bacillus Globigii* is a bacterial endospore that is commonly used as a surrogate for Anthrax a biological warfare agent.

Endospore Culture & Preparation

Bacillus globigii spore preparations were grown sporelated, purified and spray dried to yield a pure dry powder with greater than $1e^{11}$ cfu/gram. The dry endospore preparation were suspended in PBS + 0.005% Tween 80 at a mass: volume ratio to obtain a concentration of approximately 1×10^9 cfu/ml.

Plating and Enumeration

Impinger and stock biological cultures were serially diluted and plated in triplicate (multiple serial dilutions)

using a small drop assay technique onto tryptic soy agar plates. The plated cultures were incubated for 24-48 hours and enumerated and recorded.

Inert Particle Characterization

In order to calculate the dissemination efficiency and stability of the bioaerosol, polystyrene latex microspheres (PSL microspheres) were used to characterize the various aspects of the chamber system. Polydispersed PSL microspheres with aerodynamic diameters of 0.5 - 5.0 μ m were nebulized, in DI water, and chamber concentrations were recorded using the APS. The APS recorded individual particle count from 0.5 to 20.0 μ m in size with 52 separate size bins of resolution. In addition to these trial separate monodispersed PSL microspheres of the following sizes were also used for characterization: 500nm, 1.0 μ m and 2.0 μ m.

Figure 4, below, shows the results for the control and NV 1050 trials for 0.5, 1.0 and 2.0 μ m PSL microsphere testing in the chamber. This data has been normalized to show percent reduction as a function of time in the chamber. Control trials were performed with

chamber mixing fans “on” during the entirety of the trial. Additionally, the NV 1050 trials also had the mixing fans “on” during the entire trial also for consistency of test methods. Looking at the data we can see the sharp drop in particle number concentration with the NV 1050 in operation (please note the LOG scale of the y-axis). This figure also shows that after 20 minutes of operation by the NV 1050 device limits-of-detection for the APS are reached (0.001 particle per cc or 1 particle per liter)

Figure 5, on the following page, shows the NET LOG reduction for 0.5, 1.0 and 2.0 μ m PSL microspheres. The net log reduction of all tested sizes of PSL microspheres follows a precise logarithmic function for both cases. The figure shows the comparison between the reduction with and without the device in operation. It is notable that this size (0.5 μ m) is smaller than all vegetative bacteria, bacterial endospores, mold spores and pollens; it is also smaller than most soot particles.

The PSL microsphere trial data were used to estimate nebulization efficiencies, particle stability and AGI-30 collection times and aerosol persistence prior to bioaerosol testing.

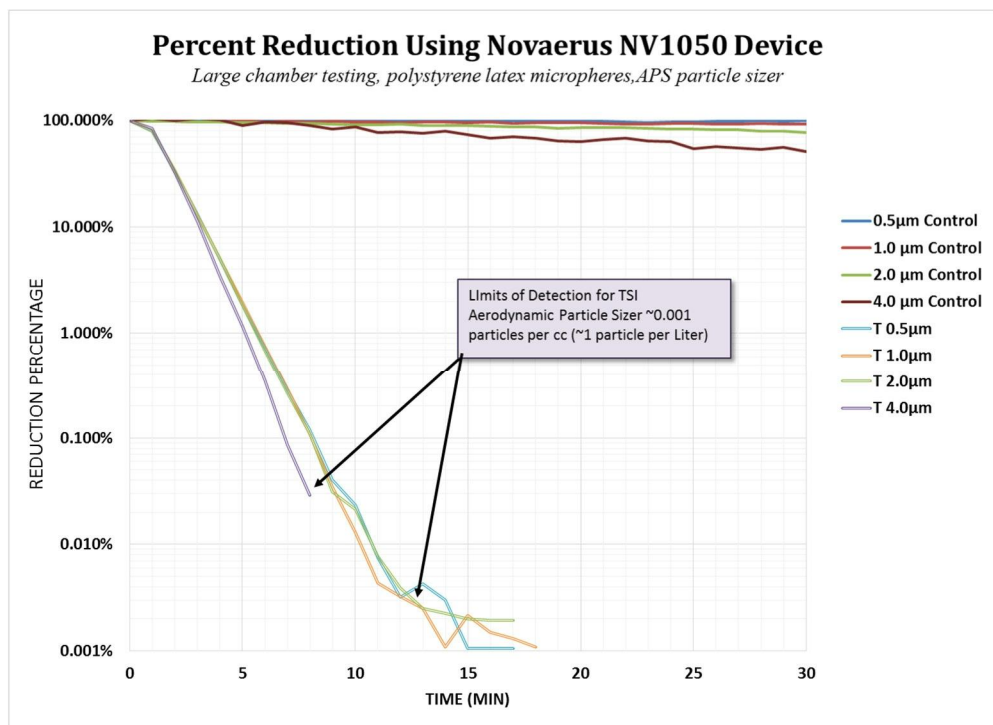


Figure 4: PSL Microspheres Chamber Trials for the Control and Novaerus NV 1050 Device. Chart shows percent reduction versus time. Note that the y-axis is a LOG scale.

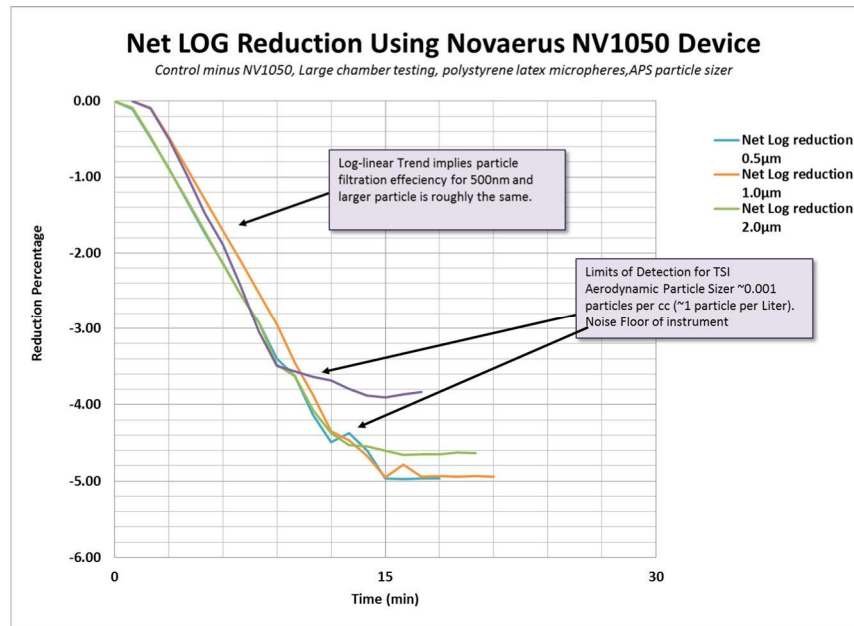


Figure 5: Net LOG Reduction of PSL Microspheres by Novaerus NV 1050 Device. Control minus NV 1050 Trial data for 0.5, 1.0 and 2.0 µm particle sizes in bioaerosol test chamber.

Bioaerosol Control Testing

To accurately assess the Novaerus NV 1050 unit, test chamber pilot control trials were performed with all Bioaerosols over a 90-minute period without the device in operation to characterize the biological challenge aerosol for particle size distribution, aerosol delivery/collection efficiency, and viable concentration over time. Control testing was performed to provide baseline comparative data in order to assess the actual reduction from the Novaerus NV 1050 challenge testing and verify that viable bioaerosol concentrations persisted above the required concentrations over the entire pilot control test period.

During control runs, a single low velocity fan located in the corner of the bioaerosol test chamber was turned on for the duration of trial to ensure a homogenous aerosol concentration within the aerosol chamber. The mixing fan was used for all control runs and was turned off during Novaerus NV 1050 decontamination trials.

The two impingers used for bacteriophage were pooled and mixed prior to plating and enumeration. A complete test matrix for all bioaerosol trials can be found above in **Figure 4**.

Novaerus NV 1050 Testing

For each control and challenge test, the Collision nebulizer was filled with approximately 40 mL of biological stock and operated at 50 psi for a period of 15 minutes (organism dependent). For control and Novaerus NV 1050 trials, the impingers were filled with 20 mL of sterilized PBS (addition of 0.005% v/v Tween 80) for bioaerosol collection. The addition of Tween 80 was shown to increase the impinger collection efficiency and de-agglomeration of all microorganisms.

The chamber mixing fan was turned on during bioaerosol dissemination to assure a homogeneous bioaerosol concentration in the test chamber prior to taking the first impinger sample.

Trial	Run	Device	Fan Speed	Organism	Target Monodispersed Particle Size	Trial Time (min)	Sampling Period (min)	Sampling
C1	Control	Novaerus NV1050	Speed 5	<i>Bacillus Globigii</i> - <i>Bacterial Endospores</i>	1.0 - 2.5µm	30	0, 7.5, 15, 22.5, 30, 45	AGI Impingers, SKC Viable Cascade Impactor, APS
T1	Challenge							
T2	Challenge							
T3	Challenge							
T4	Challenge							

Figure 4: Bioaerosol Test Matrices for all trials

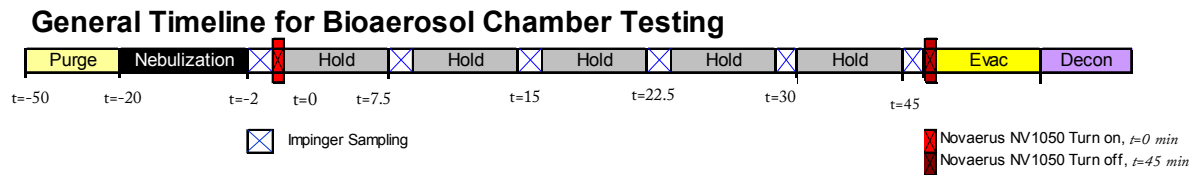


Figure 5: General Trial Timeline for Novaerus NV1050 Decontamination Trials.

Following bioaerosol generation, baseline bioaerosol concentrations were established for each pilot control and Novaerus NV 1050 test by sampling simultaneously with two AGI-30 impingers located at opposite corners of the chamber. AGI samples were collected for 2 to 10 minutes at set time points detailed in **Figure 5** above throughout the entire test period. **Figure 5** shows the general timeline for each Novaerus NV 1050 live bioaerosol challenge trial.

Collected impinger chamber samples were pooled and mixed at each sample interval for each test. Aliquots of impinger samples were collected and then used for plating. Impingers were rinsed 6x with sterile filtered water between each sampling interval, and re-filled with sterile PBS using sterile graduated pipettes for sample collection.

For Novaerus NV 1050 biological testing, the unit was turned on to the highest setting (speed 5) immediately following a time 0 baseline sample and operated for the entirety of the test (45min). Subsequent impinger samples were taken at 0, 7.5 15, 22.5, 30 and 45 minutes and samples enumerated for viable concentration to measure the effective viable bioaerosol reduction during operation of the Novaerus NV 1050 device over time. All samples were plated in triplicate on tryptic soy agar media over a minimum of a 3 log dilution range.

Plates were incubated for 24 hours and enumerated for viable colony forming units (fu) to calculate aerosol challenge concentrations in the chamber and reduction of viable microorganisms.

Post-Testing Decontamination and Prep

Following each test, the chamber was air flow evacuated/purged for a minimum of twenty minutes between tests and analyzed with the APS for particle concentration decrease to baseline levels between each test. The chamber was decontaminated at the conclusion of the trials with aerosol/vaporous hydrogen peroxide (35%). The Collision nebulizer and impingers were cleaned at the conclusion of each day of testing by

soaking in a 5% bleach bath for 20 minutes. The nebulizer and impingers were then submerged in a DI water bath, removed, and spray rinsed 6x with filtered DI water until use.

Bioaerosol Particle Size Data

Aerosol particle size distributions were measured with the APS. The APS has a dynamic measurement range of 0.5 to 20µm and was programmed to take consecutive real time one-minute aerosol samples throughout the duration of each aerosol trial.

Data was logged in real time to an Acer laptop computer, regressed, and plotted. The aerosol particle size distribution for *Bacillus Globigii* is shown in **Figure 6**.

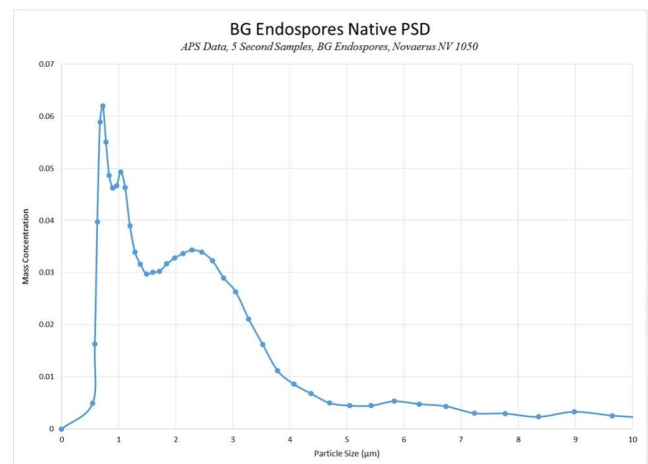


Figure 6: Bacterial Endospore (BG) Particle Size Distribution in Test Chamber.

The particle size distribution for *Bacillus Globigii* bioaerosols are shown to be within the respirable range for alveolar region tract lung deposition and show a low geometric standard deviation (GSD) indicating a monodispersed aerosol was generated into the test chamber.

	Number Particle Size
Median (µm)	0.857
Mean (µm)	0.938
Geo. Mean (µm)	0.893
Mode (µm)	0.777
Geo. St. Dev.	1.35
Total Conc.	4.99e+03(#/cm ³)

Figure 7: Key Particle Size Distribution Values for *Bacillus Globigii* Bioaerosol in Chamber.

Data Analysis

Results from the control trials were graphed and plotted to show natural viability loss over time in the chamber. These control runs served as the basis to determine the time required for the Novaerus NV 1050

to achieve a 4 log (99.99%) reduction in viable bioaerosol above the natural losses from the control runs. The control and trial runs are plotted showing log reduction in viable bioaerosol for *Bacillus Globigii*. All data is normalized with time zero ($t=0$ minutes) enumerated concentrations. Subsequent samples are normalized and plotted to show the loss of viability over time.

Results

When tested against the *Bacillus Globigii* the device showed a high net log reduction in a relatively short amount of time at the 22.5-minute time point there was an average 4.84 LOG reduction. At the 30-minute time point the Novaerus NV 1050 device had an average net log reduction of 5.11 LOG. This is represented graphically in **Figure 7** which shows the log reduction for each trial as well as an overall average.

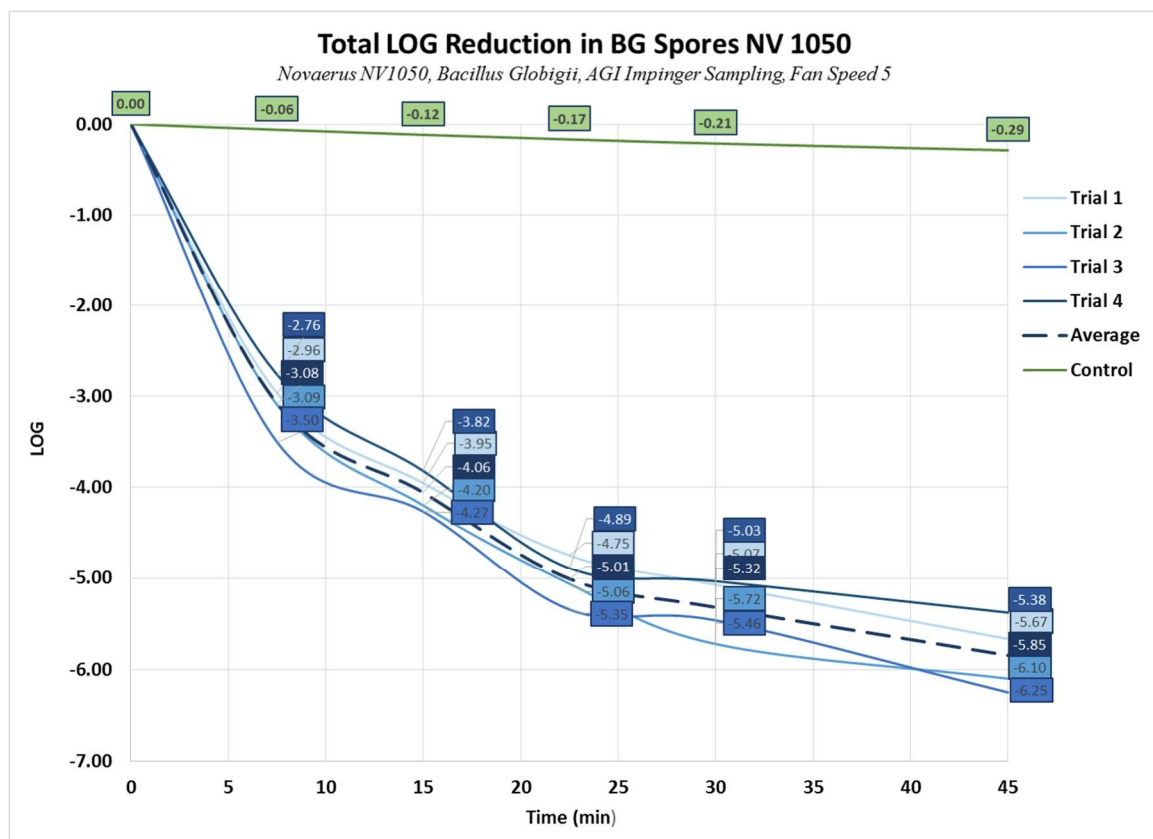


Figure 7: Bg Endospores Novaerus NV 1050 Log Reduction.

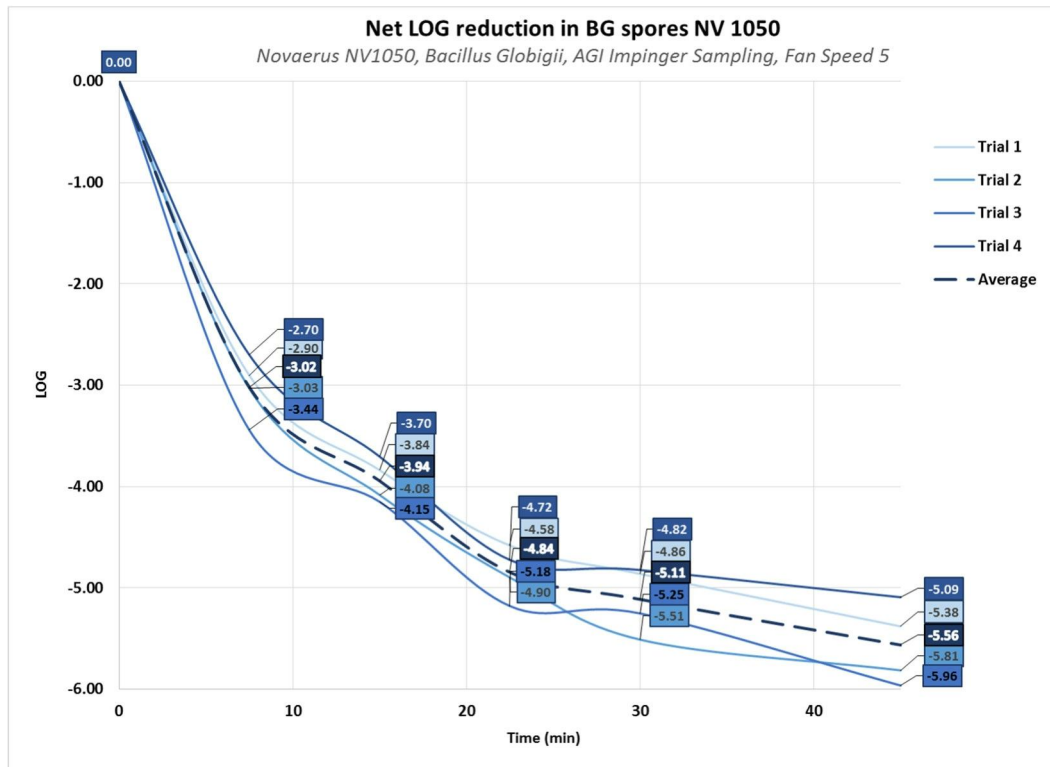


Figure 8: Bacillus Globigii Endospores Novaerus NV 1050 Net LOG Reduction.

Summary of Results

When tested against the *Bacillus Globigii*, a surrogate traditionally used for Anthrax the device showed a high net log reduction in a relatively short amount of time. By the 30-minute time point results showed an average 5.32 LOG reduction which equates to an average 5.11 net LOG reduction. This equates to over a 99.999% reduction in viable *Bacillus Globigii*

Endospores. LOG reduction results can be found in **Figure 7**

An average net log reduction of 5.11 in 30-minutes indicates that this device is very effective in a short period of time. These results indicate that in theory the Novaerus NV 1050 device would help prevent the spread of airborne infection. These results are represented graphically in **Figure 8** a table summarizing individual trial results can be found in **Figure 9** for net log reduction and **Figure 10** for percentage reduction.

Average NET LOG Reduction of Bacillus Globigii By Novaerus NV 1050

Bioaerosol Type	Species	Surrogate	Trial ID	7.5min	15min	22.5min	30min	45min
Bacterial Endospore	<i>Bacillus Globigii</i>	<i>Bacillus Anthracis</i>	1	-2.90	-3.84	-4.58	-4.86	-5.38
	<i>Bacterial Endospore</i>							
Bacterial Endospore	<i>Bacillus Globigii</i>	<i>Bacillus Anthracis</i>	2	-3.03	-4.08	-4.90	-5.51	-5.81
	<i>Bacterial Endospore</i>							
Bacterial Endospore	<i>Bacillus Globigii</i>	<i>Bacillus Anthracis</i>	3	-3.44	-4.15	-5.18	-5.25	-5.96
	<i>Bacterial Endospore</i>							
Bacterial Endospore	<i>Bacillus Globigii</i>	<i>Bacillus Anthracis</i>	4	-2.70	-3.70	-4.72	-4.82	-5.09
	<i>Bacterial Endospore</i>							
Average				-3.02 +/- 0.31	-3.94 +/- 0.21	-4.84 +/- 0.26	-5.11 +/- 0.33	-5.56 +/- 0.4

Figure 9: Net Log Reduction summary table

Average Percent Reduction of *Bacillus Globigii* By Novaerus NV 1050

Bioaerosol Type	Species	Surrogate	Trial ID	7.5min	15min	22.5min	30min	45min
Bacterial Endospore	<i>Bacillus Globigii</i>	<i>Bacillus Anthrax</i>	1	99.8913%	99.9889%	99.9982%	99.9992%	99.9998%
	<i>Bacterial Endospore</i>							
Bacterial Endospore	<i>Bacillus Globigii</i>	<i>Bacillus Anthrax</i>	2	99.9191%	99.9937%	99.9991%	99.9998%	99.9999%
	<i>Bacterial Endospore</i>							
Bacterial Endospore	<i>Bacillus Globigii</i>	<i>Bacillus Anthrax</i>	3	99.9685%	99.9946%	99.9995%	99.9997%	99.9999%
	<i>Bacterial Endospore</i>							
Bacterial Endospore	<i>Bacillus Globigii</i>	<i>Bacillus Anthrax</i>	4	99.8270%	99.9848%	99.9987%	99.9991%	99.9996%
	<i>Bacterial Endospore</i>							
Average				99.9015%	99.9905%	99.9989%	99.9994%	99.9998%

Figure 10: Reduction percentage summary table

References

T. Reponen, K. Willeke, V. Ulevicius et al. *Techniques of Dispersion of Microorganisms in Air*. Aerosol Science and TechnoLOGY. 27: 1997. pp. 405-421.

Ding and Wing. *Effects of Sampling Time on the Total Recovery rate of AGI-30 Impingers for E. coli*. Aerosol and Air Quality Research, Vol. 1, No. 1, 2001, pp. 31-36.

Analytical Testing Facility

Aerosol Research and Engineering Labs, Inc.
15320 S. Cornice Street
Olathe, KS 66062

Project #

10824.13


Study Director

Jamie Balarashti
Aerosol Research and Engineering Laboratories

GLP Statement

We, the undersigned, hereby certify that the work described herein was conducted by Aerosol Research and Engineering Laboratories in compliance with FDA Good Laboratory Practices (GLP) as defined in 21 CFR, Part 58.

Study Director:

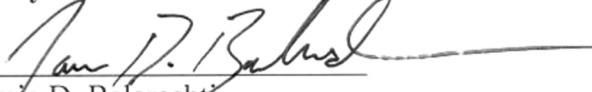


Jamie D. Balarashti
Study Director
ARE Labs, Inc.

05/12/2020

Date

Principal Investigator:

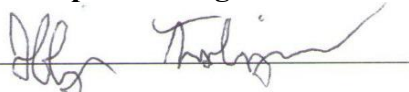

Jeffery Trolinger
Principal Investigator
ARE Labs, Inc.

05/12/2020

Date

Appendix A: Calculations

To evaluate the viable aerosol delivery efficiency and define operation parameters of the system, calculations based on (theoretical) 100% efficacy of aerosol dissemination were derived using the following steps:

- Plating and enumeration of the biological to derive the concentration of the stock suspension (C_s) in pfu/mL or cfu/mL, or cfu/g for dry powder.
- Collison 24 jet nebulizer use rate (R_{neb}) (volume of liquid generated by the nebulizer/time) at 28 psi air supply pressure = 1.0 ml/min.
- Collison 24 jet Generation time (t) = 20 or 30 minutes, test dependent.
- Chamber volume (V_c) = 15,993 Liters

Assuming 100% efficiency, the quantity of aerosolized viable particles (V_p) per liter of air in the chamber for a given nebulizer stock concentration (C_s) is calculated as:

$$\text{Nebulizer: } V_p = \frac{C_s \cdot R_{neb}}{V_c} t$$

Plating and enumeration of the biological to derive the concentration of the dry powder (C_p) in cfu/g.

- Eductor use rate (M_p) (Mass of powder generated by the eductor in grams)
- Chamber volume (V_c) = 15,993 Liters

Assuming 100% efficiency, the quantity of aerosolized viable particles (V_p) per liter of air in the chamber for a given dry powder stock concentration (C_p) is calculated as:

$$\text{Eductor: } V_p = \frac{C_p \cdot M_p}{V_c}$$

AGI – 30 impinger or 47mm filter collection calculation:

- Viable aerosol concentration collection (C_a) = cfu or pfu/L of chamber air.
- Viable Impinger concentration collection (C_{Imp}) = cfu or pfu/mL from enumeration of impinger sample or filter sample.
- Impinger sample collection volume (I_{vol}) = 20 mL collection fluid/impinger, or extraction fluid for filter.
- AGI-30 impinger or filter sample flow rate (Q_{imp}) = 12.5 L/min.
- AGI-30 impinger or filter sample time (t) = 5 or 10 minutes, test dependent.

For viable impinger or filter aerosol concentration collection (C_a) = cfu or pfu/L of chamber air:

$$C_a = \frac{C_{Imp} \cdot I_{vol}}{Q_{imp}} t$$

The aerosol system viable delivery efficiency (expressed as %) is:

$$Efficiency = \frac{C_a}{V_p} \cdot 100$$

Appendix B: 24 Hour Testing

Introduction

In addition to results reported in this document, two additional trials were done with the NV1050 to demonstrate that the removal of spores is consistent and prolonged; i.e., spores do not escape or get shed after initial entrapment.

These additional trials comprise of 24-hour runs on reasonable worst and best case scenarios. A set of filters which have been used past their end-of-life period as per recommendations in the NV1050 manual were used for the worst case scenario while the device was operated at its lowest speed. New filters were used in the best case scenario while the device was operated at its maximum speed.

Methods

Methods for this portion of the study remain the same with the exception of test time. AGI-Impingers were used for initial sampling followed by SKC viable

impactors at later time points. Samples were taken at T-0, T-1 & T-24 hours. For this testing the device was run on both the highest and lowest setting for comparison.

Test Matrix

Two trials were conducted for 24 hour testing.

- 1) **24 Hour test with the NV1050 set to the lowest fan velocity (speed 1) with end of life filters**
- 2) **24 Hour Test with the NV1050 set to the highest fan velocity (speed 5) with beginning of life filters**

Results

24 hour testing on the low setting showed a similar drop in viable bioaerosol at the T-1 hour time point with a LOG reduction of 5.61. At the 24 hour time point the device showed a 7.46 LOG reduction. These results are represented graphically in **Figure B1**.

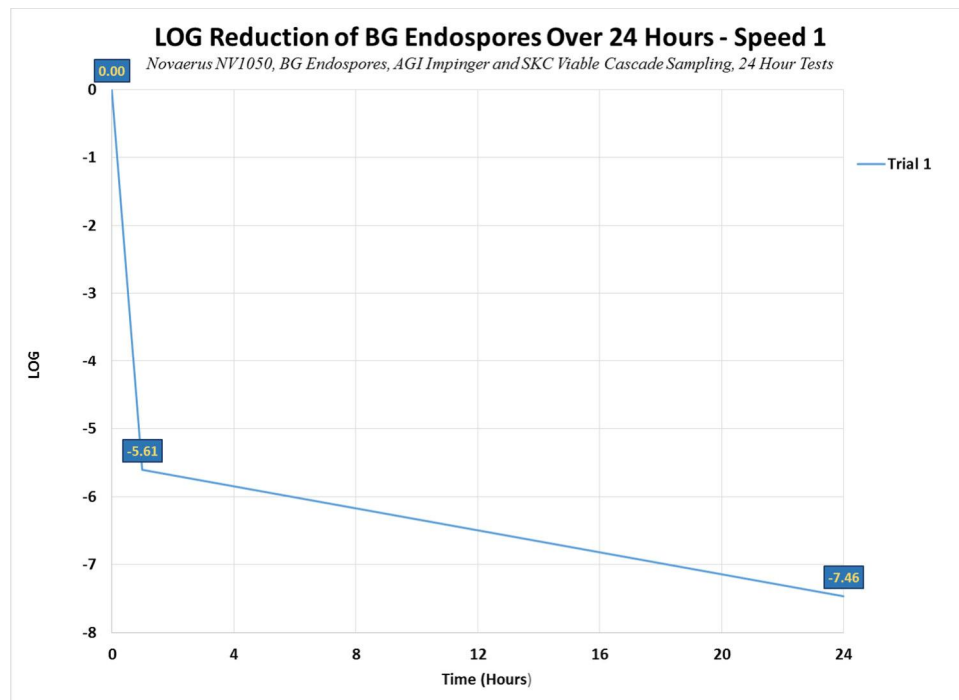


Figure B1: LOG reduction of BG Endospores over 24 hour time period by Novaerus NV1050 on low fan velocity

24 hour testing on the high setting showed a comparable reduction in viable bioaerosol at the T-1 hour time point with a LOG reduction of 6.67. At the 24

hour time point the device showed a 7.05 LOG reduction. These results are represented graphically in **Figure B2**.

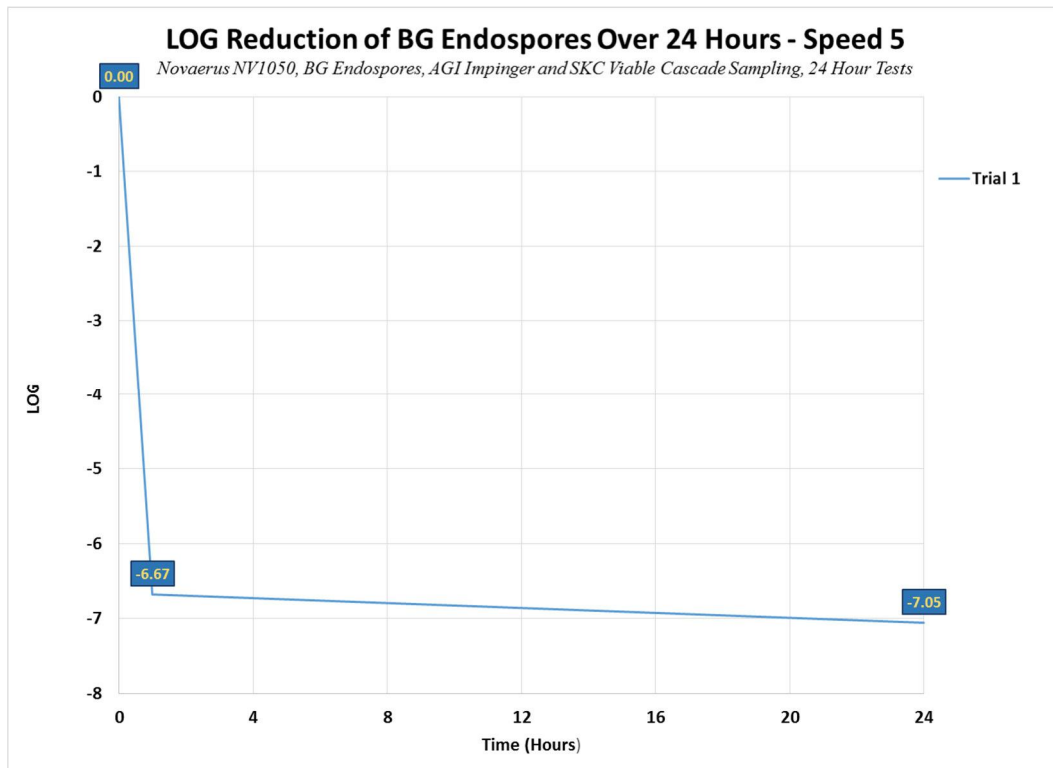


Figure B2: LOG reduction of BG Endospores over 24 hour time period by Novaerus NV1050 on high fan velocity

Conclusions

The 24-hour trials show that the concentration of bacterial spores does not increase in both, worst and best case scenarios. This provides reasonable evidence

that the NV1050 device can reduce the concentration of airborne spores in a consistent and prolonged manner.

24 Hour Testing Executive Summary Table

Percent Reduction Summary Data

Bioaerosol Type	Species	Surrogate	Fan Speed	1 Hour	24 Hours
Bacterial Endospore	<i>Bacillus Globigii</i>	<i>Bacillus Anthrax</i>	Speed 1	99.999752%	99.999997%
	<i>Bacterial Endospore</i>				
Bacterial Endospore	<i>Bacillus Globigii</i>	<i>Bacillus Anthrax</i>	Speed 5	99.999979%	99.999991%
	<i>Bacterial Endospore</i>				

LOG Reduction Summary Data

Bacterial Endospore	<i>Bacillus Globigii</i>	<i>Bacillus Anthrax</i>	Speed 1	-5.61	-7.46
	<i>Bacterial Endospore</i>				
Bacterial Endospore	<i>Bacillus Globigii</i>	<i>Bacillus Anthrax</i>	Speed 5	-6.67	-7.05
	<i>Bacterial Endospore</i>				

Figure B3: Executive Summary Data for 24 Hour Testing