

## PRODUCT MANUAL

# 12' BUDFLOW

SINGLE 90° ALLEY EXIT T12-SA90BF



OCTOBER 2025 | 7002402

1-877-275-6075 cs@arrowquip.com arrowquip.com



## **MARNING**

PLEASE FOLLOW ALL SAFETY INSTRUCTIONS PROVIDED IN THIS MANUAL BEFORE OPERATION. ARROWQUIP DOES NOT ACCEPT RESPONSIBILITY FOR ANY ACCIDENTS OR INJURY WHEN THIS SAFETY MANUAL HAS NOT BEEN READ IN FULL AND KEPT WITH THE PRODUCT AT ALL TIMES. OPERATORS OF THIS PRODUCT TAKE AND ACCEPT RESPONSIBILTY FOR ANY HARM OR INJURY TO THE ANIMAL OR OPERATOR WHEN IT PERTAINS TO HOW THE EQUIPMENT IS USED AND MAINTAINED.

Please keep this manual for frequent reference and to pass on to new users or owners.

## **CONTENTS**

SAFETY PRECAUTIONS	6
SAFETY GUARANTEE	7
BEFORE INSTALLING	8
TOOLS REQUIRED	8
PACKING LIST	8
LEFT-HAND TUB	9
ASSEMBLY	9
LEFT-HAND MAIN FRAME CONVERSION	17
RIGHT-HAND TUB ASSEMBLY	20
ASSEMBLY	20
RIGHT-HAND MAIN FRAME CONVERSION	28
BILL OF MATERIALS	32
WARRANTY	34

## **SAFETY PRECAUTIONS**

PLEASE FOLLOW ALL SAFETY PRECAUTIONS OUTLINED HEREIN. ANY HARM TO THE ANIMAL OR INJURY TO THE OPERATOR WHICH OCCURS DUE TO HOW THE PRODUCT IS OPERATED, OR RESULTING FROM A LACK OF SAFETY PRECAUTIONS ARE THE SOLE RESPONSIBILITY OF THE OPERATOR.

All farm machinery and equipment is potentially dangerous. Careless use of any Arrowquip livestock equipment may cause injury or damage to persons, cattle, or property. Arrowquip has taken precautions in the design and manufacturing of this product to ensure that it is safe and user-friendly. Therefore, user must assume all responsibility and risk associated with the possession and use of the equipment.

## SAFETY GUARANTEE

Arrowquip is committed to creating safe cattle management experiences. With this commitment to safety, in the event any purchaser of Arrowquip equipment is **physically** injured while operating the equipment AND requires medical treatment, Arrowquip will provide a full refund of the equipment purchase price and the purchaser will be allowed to keep the equipment. Equipment must be warranty-registered, and the purchaser must read and practice the contents and recommended maintenance and procedures outlined herein to be eligible.

Arrowquip also commits to repair or replace any part of the equipment that is defective, malfunctions or otherwise falls under normal use and inside the equipment's warranty terms. If the equipment requires replacement, it shall be replaced with an identical model or a newer model of the equipment. For further details, visit arrowquip.com/promise.



#### WARNING:

Read below before operation.

- 1. Ensure the operator understands the contents of this manual before using the equipment.
- 2. **DO NOT** wear loose-fitted clothing.
- 3. Ensure the equipment is on a firm, level, dry surface that is free of rocks and other trip hazards.
- 4. DO NOT ALLOW CHILDREN UNDER THE AGE OF 18 NEAR AN OPERATING MACHINE.
- 5. Follow safe cattle handling procedures in other areas of the yard so that cattle are more docile.
- 6. **DO NOT** make any modifications to Arrowquip equipment. Non-factory modifications to the equipment can reduce the safety for the operator and livestock.

## **BEFORE INSTALLING**



**LEVEL GROUND** 



IILAVI

- Partner Lift




**FORKLIFT REQUIRED** 

## **TOOLS REQUIRED**

- 3/4" Wrench
- 9/16" Wrench
- Alignment Bar


### **PACKING LIST**

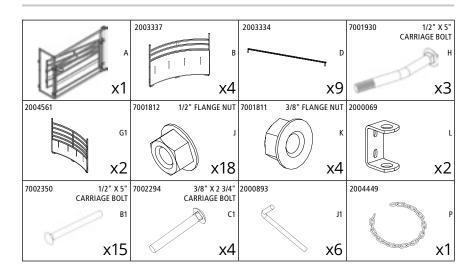



## **LEFT-HAND TUB**

## **ASSEMBLY**

1. Leave gates strapped.

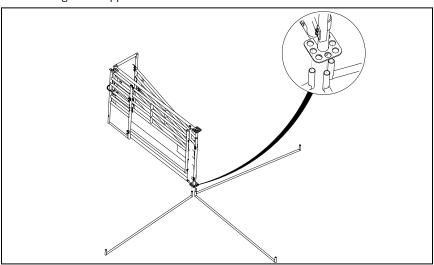

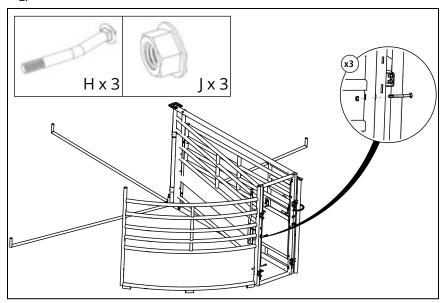


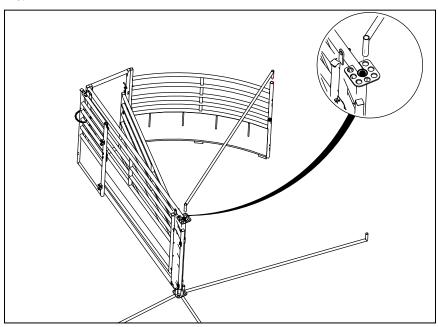



#### HAVING TROUBLE WITH YOUR BOLTS?


Uneven ground can cause problems when lining up your panels. Using the alignment bar to hold the panels together will allow you to put your tub together easily.




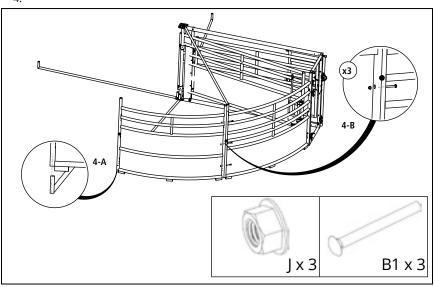


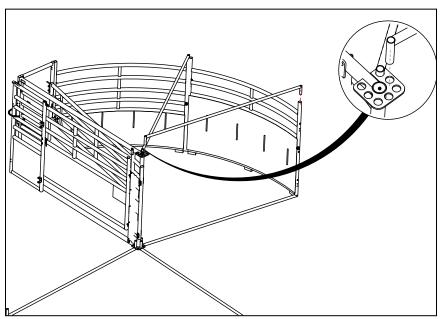


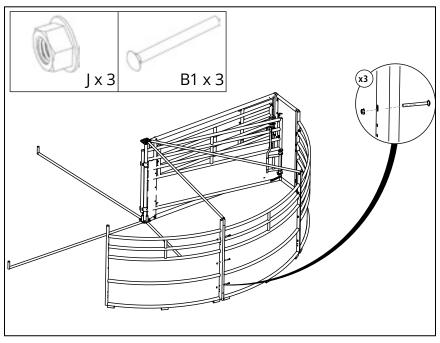


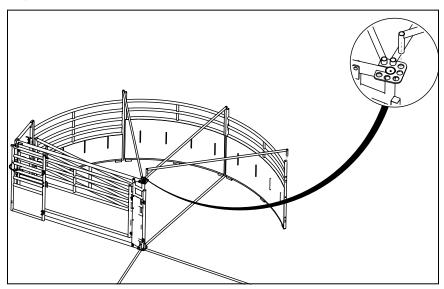

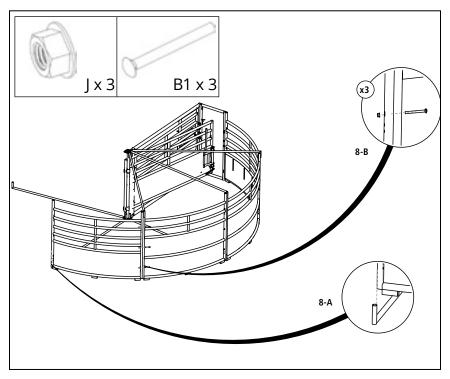


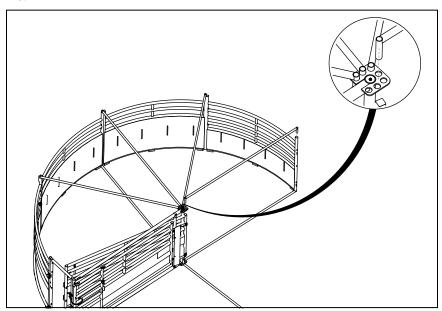


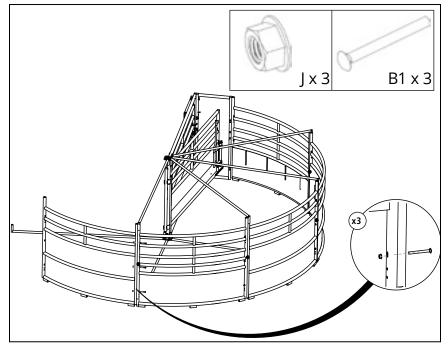


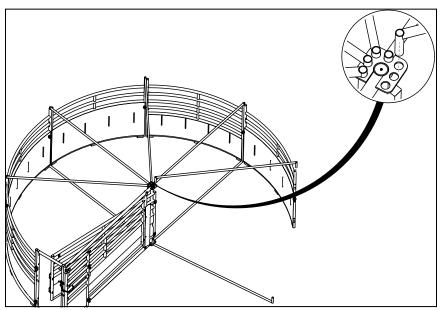


12.A J x 3 B1 x 3

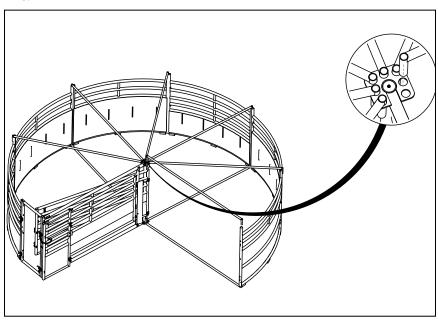

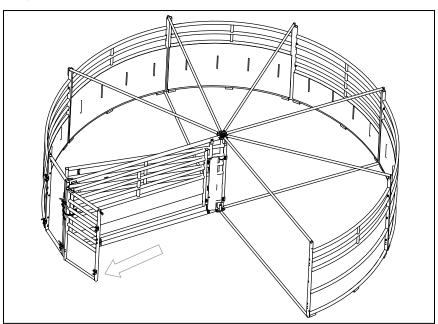

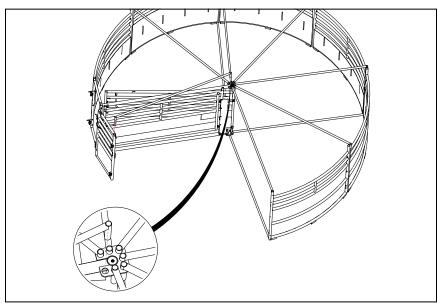

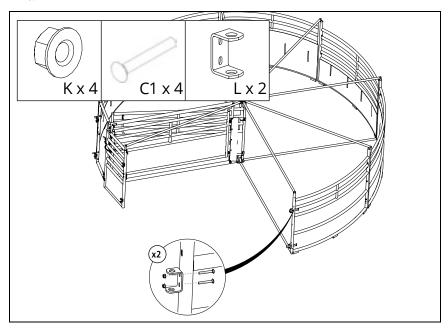

17. Tighten all nuts and bolts.

## **LEFT-HAND MAIN FRAME CONVERSION**

The main frame will come assembled from the factory. If you need to convert your tub to left-hand, follow these instructions.


You will need to remove the alley bow, crowd gate, side panel clips, and crowd gate stop before beginning assembly.




#### **WARNING:**

The Main Frame must be supported with a forklift during conversion, as it may fall.


- 1. Remove Panel Pins connecting the 3E Panel to the Main Frame. Set 3E Panel aside.
- 2. Attach side panel clips to the Main Frame post. Then attach the alley bow to the Main Frame and secure.

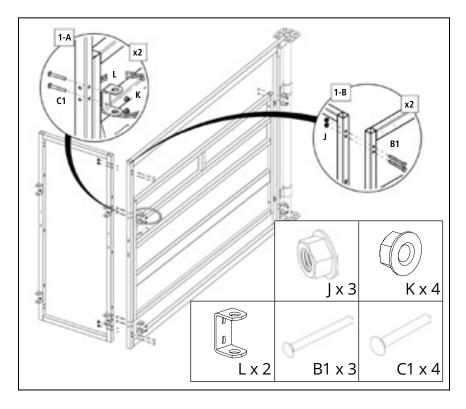


## 3. Install slam latch plate.

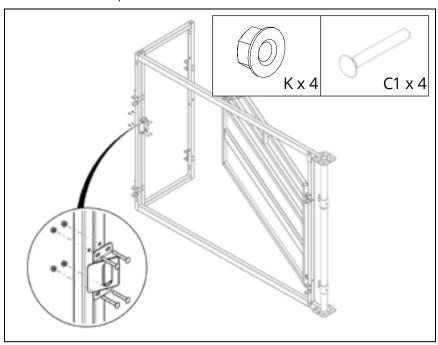

#### 4. Install the Crowd Gate.

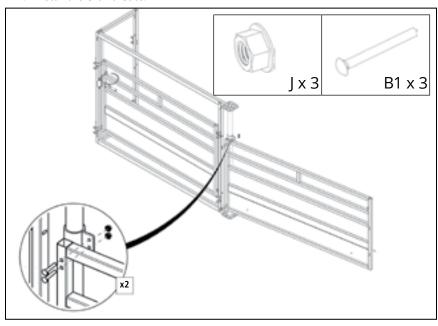

#### 5. Install the Crowd Gate Stop.

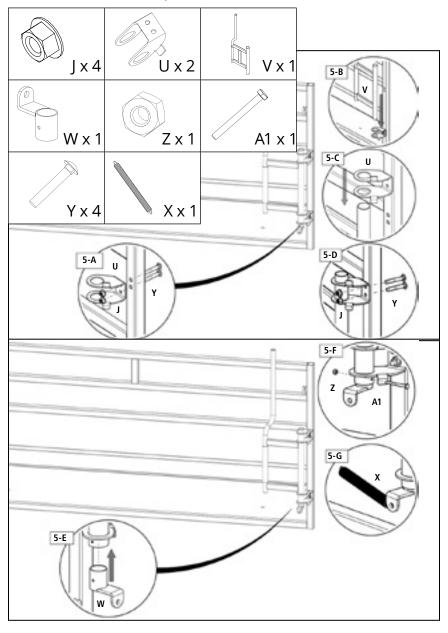



- 6. Flip all four panel clips on the 3E Panel to the opposite side of the bow.
- 7. Connect the 3E Panel to the opposite side of the Main Frame with Panel Pins.
- 8. Refer to Left-Hand Tub Assembly on **PAGE 9** to complete.


## **RIGHT-HAND TUB ASSEMBLY**

## **ASSEMBLY**

1. Leave gates strapped.

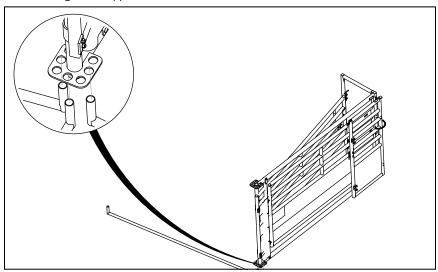


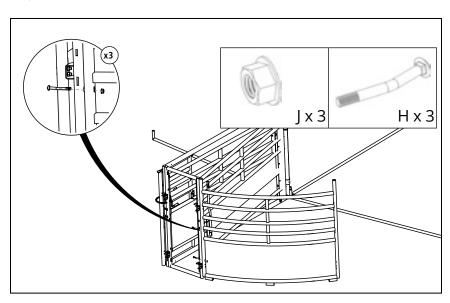


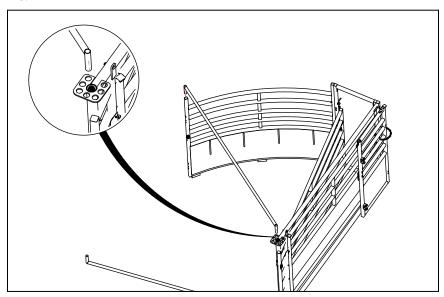



## **HAVING TROUBLE WITH YOUR BOLTS?**


Uneven ground can cause problems when lining up your panels. Using the alignment bar to hold the panels together will allow you to put your tub together easily.

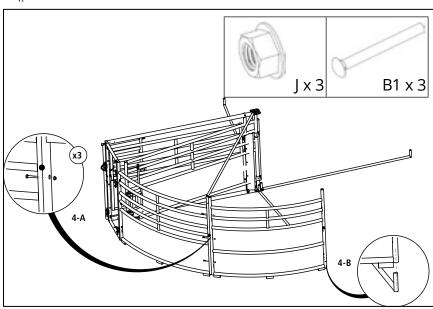


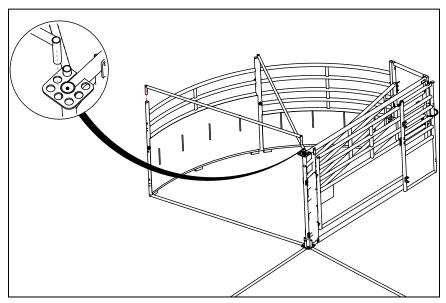


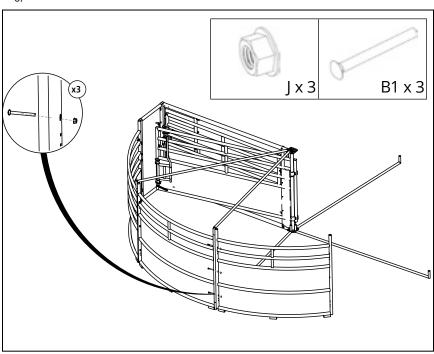


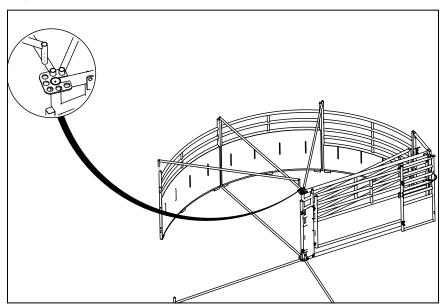


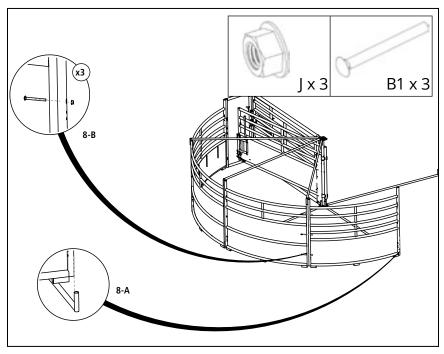


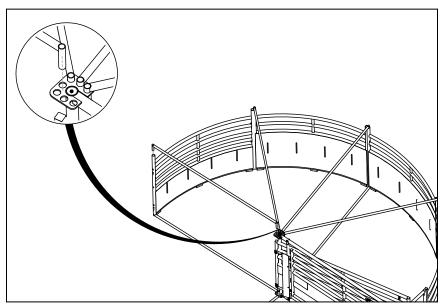


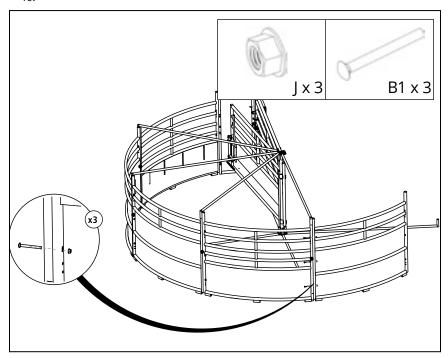


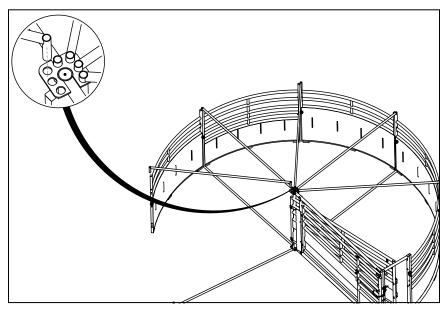


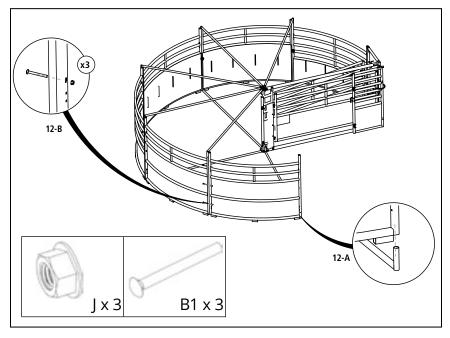

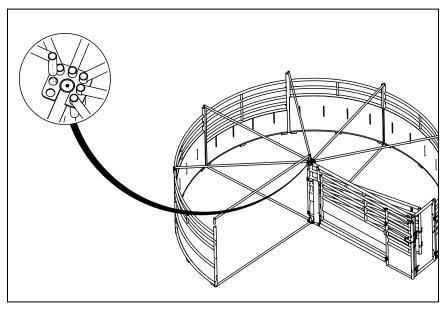

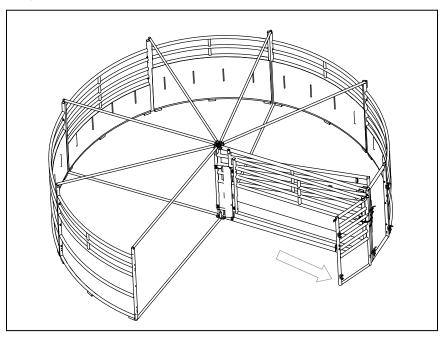

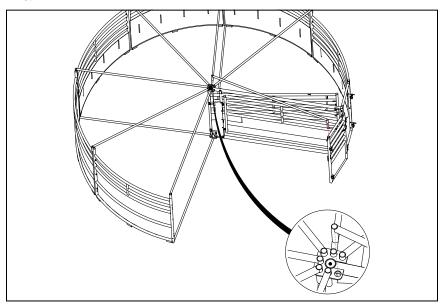

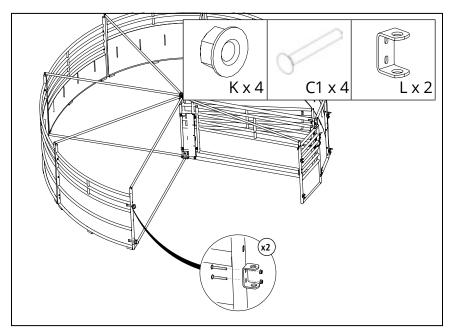

17. Tighten all nuts and bolts.

## **RIGHT-HAND MAIN FRAME CONVERSION**


The main frame will come assembled from the factory. If you need to convert your tub to left-hand, follow these instructions.


You will need to remove the alley bow, crowd gate, side panel clips, and crowd gate stop before beginning assembly.




#### **WARNING:**


The Main Frame must be supported with a forklift during conversion, as it may fall.

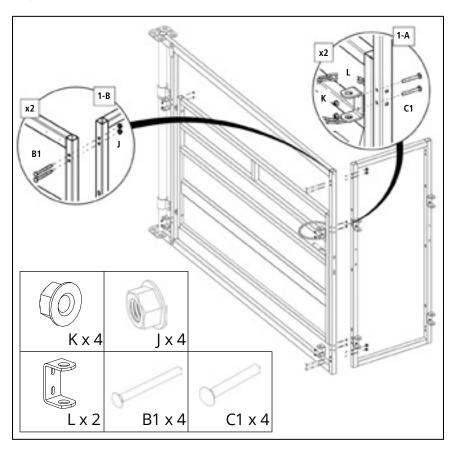

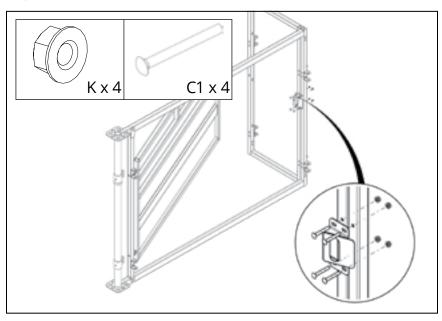

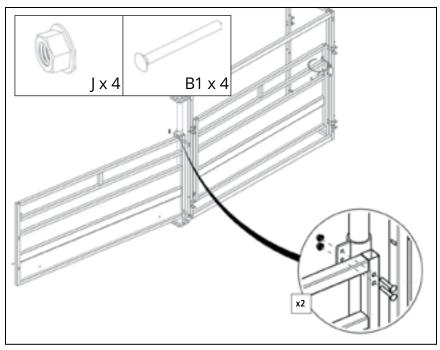

4. Install the Crowd Gate Stop.

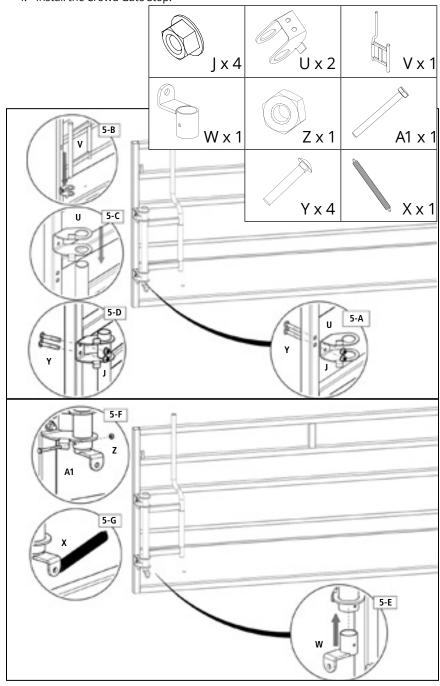

- 5. Flip all four panel clips on the 3E Panel to the opposite side of the bow.
- 6. Connect the 3E Panel to the opposite side of the Main Frame with Panel Pins.
- 7. Refer to Right-Hand Tub Assembly on **PAGE 20** to complete.

## **BILL OF MATERIALS**

2003324	2003337	2000654	2003334
			_
A	B	C	D
x1	×4	x1	x9
2003327	2000633	2000639	7001930 1/2" X 5" CARRIAGE BOLT
	F	G	₽ H
	v1		12
x1	7001812 1/2" FLANGE NUT	✓ x1	x3
2000015	7001812 1/2 FLANGE NOT	7001811 3/8" FLANGE NUT	2000069
		K (A)	L
2 x1	x33	x22	x8
2000006	2000007	2000723	2004449
M /@	N		P. P.
\\	8		8
∀ x1	$\sim$ x1	<u> </u>	x1
2000082	2000432	2002846	2003330
Q	{	S	T
x13	x1	x1	x1
2000704	2000657	2000658	2000690
U	, v	w w	x
			,
	<b>x</b> 1	© x1	x1
7002295 1/2" X 3" CARRIAGE BOLT	7002297 1/4" X 2 1/2" HEX BOLT	7002102 1/4" NYLON LOCK NUT	7002350 1/2" X 5" CARRIAGE BOLT
) Y	, z	A1	B1
x10	x1	x2	x13
7002294 3/8" X 2 3/4" CARRIAGE BOLT	7000022 3/4" X 1 1/2" HEX BOLT	7002069 3/4" NYLON LOCK NUT	7002269
C1	D1	E1	F1
x22	x2	<b>x</b> 1	x2

2004561			7002829	1/4" X 2 1/2" HEX BOLT	2007207	1/4" NYLON LOCK NUT	2000893	
		G1		H1		11		J1
		x2		x1		x1		х6
2000327	ri e		7000055	3/4" X 2" HEX BOLT				
		K1		L1				
		x14		x10				

## WARRANTY

Your product must be registered to claim warranty, and to ensure that Arrowquip has the required information to contact you in the event of a product or part recall. Any owner who fails to register their product warranty with Arrowquip through their Authorized Arrowquip Dealer voluntarily voids their warranty. Arrowquip will repair or replace products or parts of a product that prove defective due to manufacturer defect during the Warranty Period, at their sole discretion. This excludes defects resulting from normal wear and tear or product misuse. Warranty does not cover corrosion.

**NOTE**: Any modification, in any fashion, to any Arrowquip equipment immediately voids the product warranty. This includes the parts contained therein.

E.g., If a modification is made to the squeeze mechanism in a squeeze chute, and the sternum bar is bent afterwards, warranty for the damaged part, the sternum bar, contained in the modified equipment, the squeeze chute, is void. In addition, any remaining warranty for the squeeze chute and other parts contained therein, including, but not limited to, the head gate, locking system, Arrowlock or Powerlock system, and rollers, is null and void.

#### REGISTER FOR WARRANTY NOW:

**ONLINE:** arrowquip.com/product-registration

**PHONE:** 1-877-275-6075 | **EMAIL:** cs@arrowquip.com

## >>> ARROWQUIP

arrowquip.com

If you have any questions regarding your product or require assistance, please contact Arrowquip's Client Care Team at 1-877-275-6075 or by email at cs@arrowquip.com

